

## LEDs Removal Instructions for LED Luminaire LED 燈具的 LEDs 拆卸說明 / LED 燈具的 LEDs 拆卸說明

HPI Article Nr. (HPI 产品编号):	180.004949	Date (日期):	2024.1.10
HPI Model Name (HPI 型号名称):	CLEAN STAR	Revision Date	
Vendor Name (供应商名称):		(修订日期):	
Vendor Item Nr. (供应商产品编号):	LIR-017Y-A	Version Nr. (版本号):	1


Procedure how to remove the LEDs from the luminaire (in text form):  
 如何從燈具中移除 LED 的程序 (以文本形式) / 如何从灯具中移除 LED 的程序 (以文本形式) :

Step 1-2 步驟/步骤 1-2	Open the lampshade counterclockwise.
Step 3-4 步驟/步骤 3-4	Open all screws of the LED module and remove the LED module.
Step 5 步驟/步骤 5	Open the driver case.
Step 6-7 步驟/步骤 6-7	Turn the module upside down and use a knife to remove any plastic sticking out of the bottom.
Step 8-9 步驟/步骤 8-9	Use scissors to cut off the drive cable connecting the module, leaving the module
Step 10 步驟/步骤 10	Fix the led module to the metal base, Finally, the ERP can be tested by reconnecting the driver's connecting wire.

Page 1 of 2

Drawings of how to remove the LEDs from the luminaire (without damaging the luminaire itself) corresponding to the above steps.

與上述步驟對應的如何從燈具中移除 LED (不損壞燈具本身) 的圖示  
 与上述步骤对应的如何从灯具中移除 LED (不损坏灯具本身) 的图示

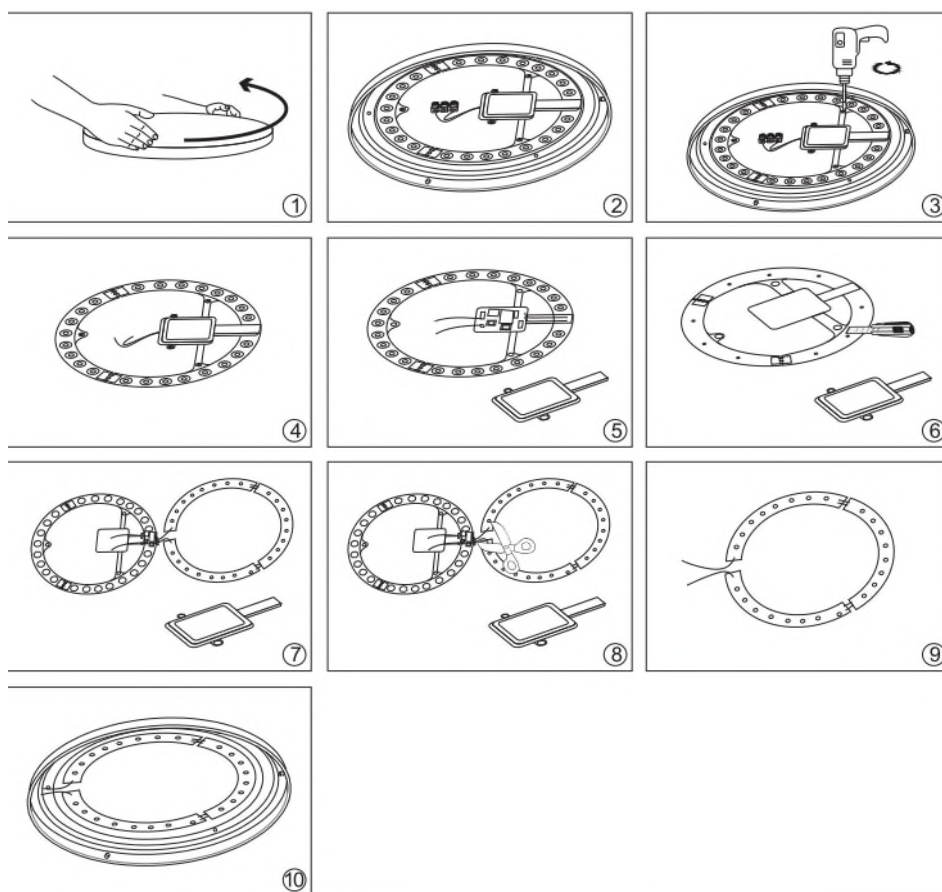

Prepared By (准备个人姓名):	Rosie
Jon Title (职称):	sales
Company Name (公司名称):	

Signature with Company Chop  
 (负责人签字加公司印章):

Rosie