


JARDIN DRESSOIR

39900

BASIC CONSTRUCTION DRAWING

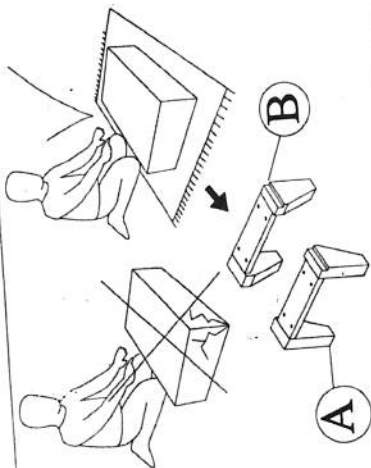

TOOL

1

2




BOLT M6 x 40



QTY: 8 PCS

WASHER

QTY: 8 PCS

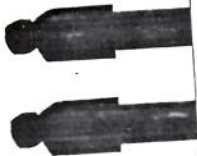

WATER LEVEL

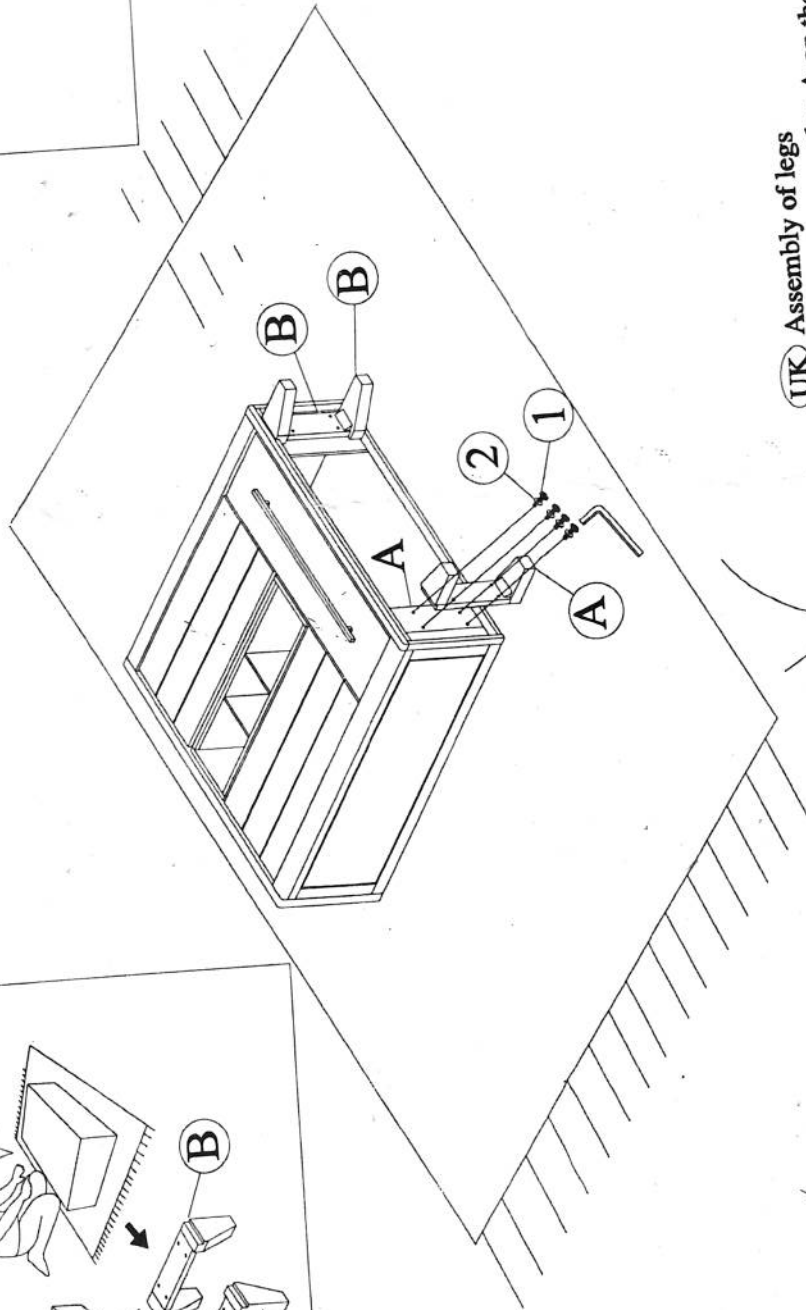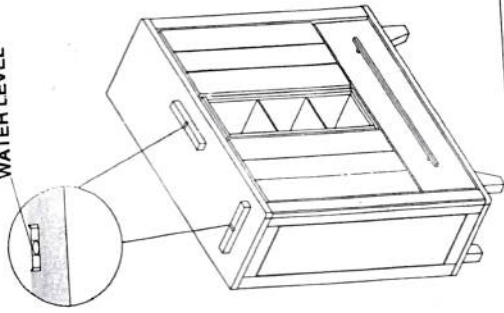

UK Assembly of legs

Note: Please put leg A on the side A and leg B on the side B

NL Bevestig de poten

Opgepast: bevestig poot A aan de A - kant en poot B aan de B - kant

D Befestigen Sie die Füße

Achtung: befestigen Sie Fuss A an der A - Seite un Fuss B an der B - seite

