
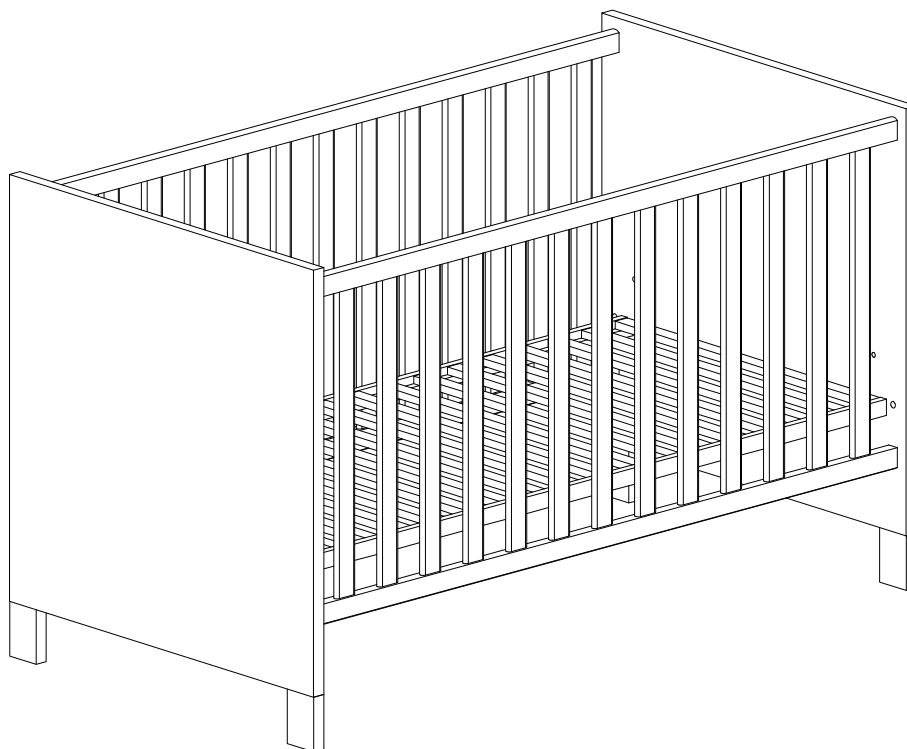


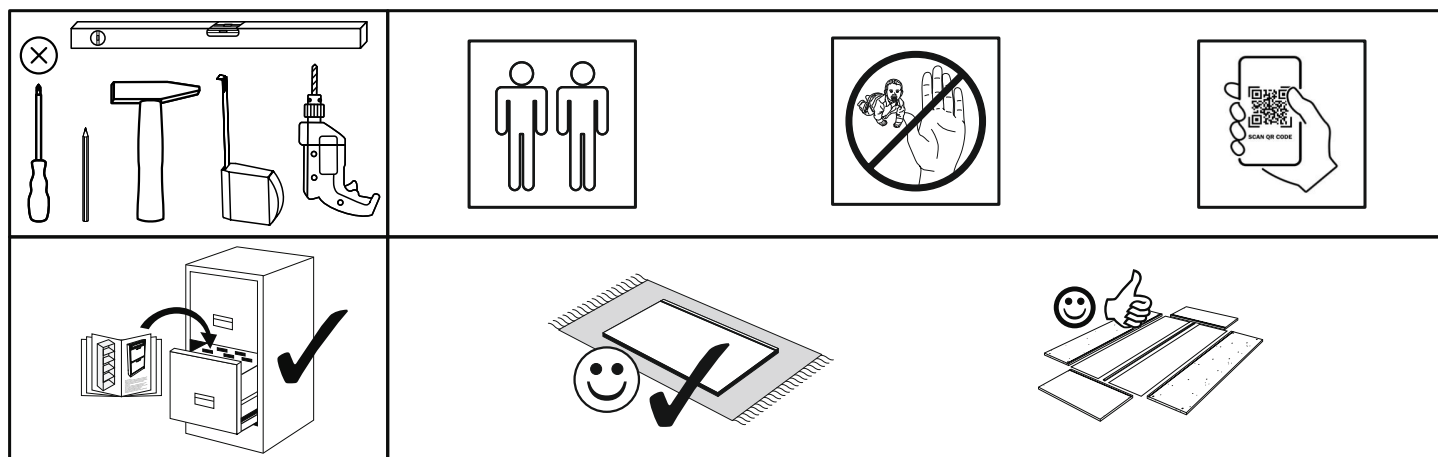

Artikel.-Nr:









0429-BH_Holz

Montageanleitung.-Nr:

MA1-00468


Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>

BT1-00560 Colli 1/2


B10-110		B10-105		B10-101	 M6x6 SW3	B01-239	 SW 3	B10-115	 12x10 M6	B10-95	 6,3x19								
8x		8x		8x		1x		12x		4x									
B01-302	 M6x80	B01-240	 SW 4	B01-357	 M6	B01-242	 SW 6	B10-80		B10-85									
4x		1x		4x		1x		2x		2x									
B02-104	 8x40	B05-130																	
4x		1x																	
B10-90																			
12x																			


L = 20 mm






Colli 1/2




Z27-93
4x

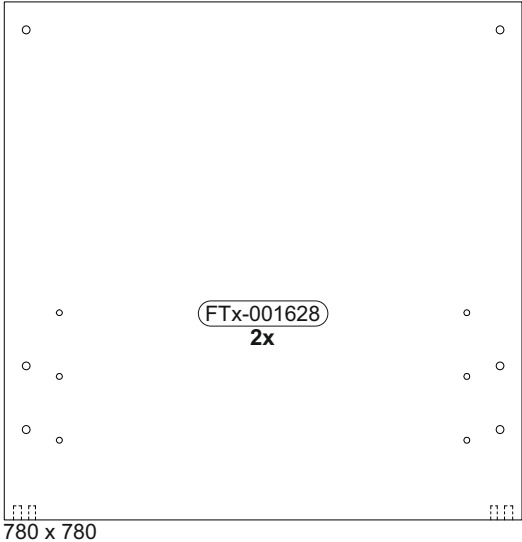


SCAN ME


Colli 2/2

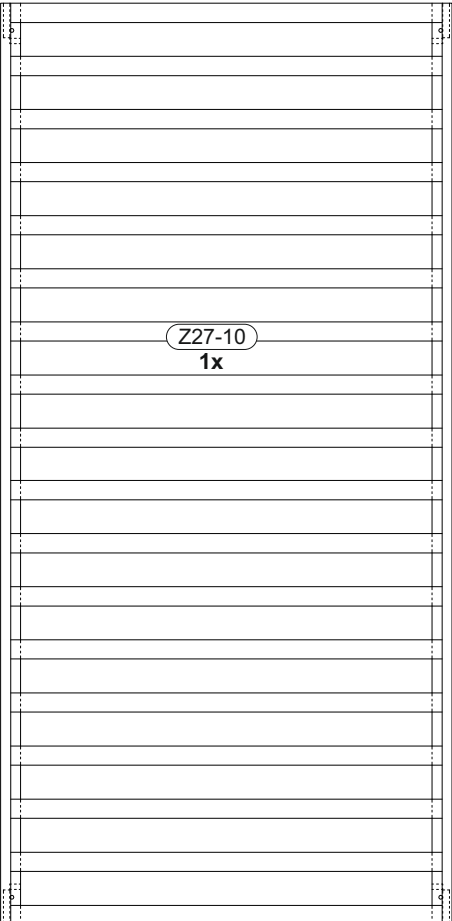

1388 x 680

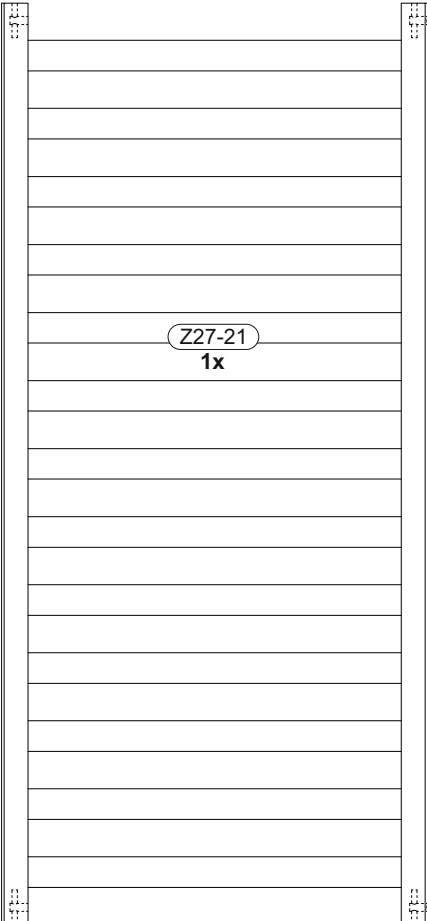




1388 x 642

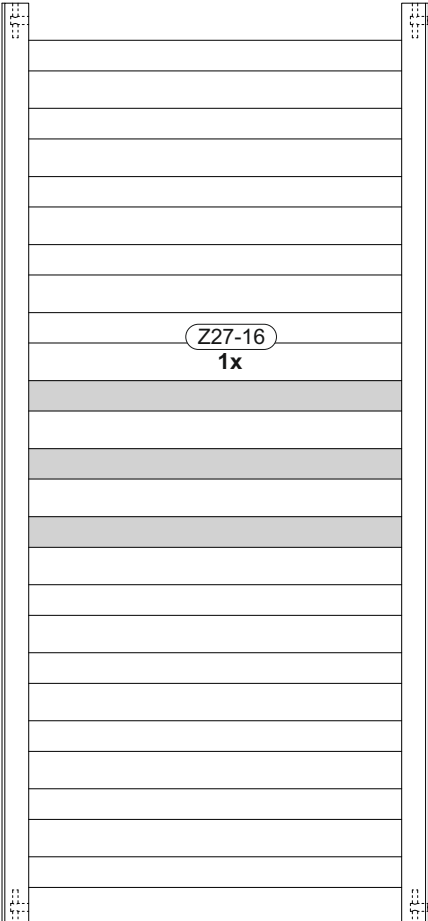

1388 x 642






1

	B10-115		B10-90		B10-110		B01-302		B01-240
	12x	12x10 M6	12x		8x		4x	M6x80	1x
			B01-357		B01-242		B02-104		B05-130
			4x	M6	1x	SW 6	4x	8x40	1x

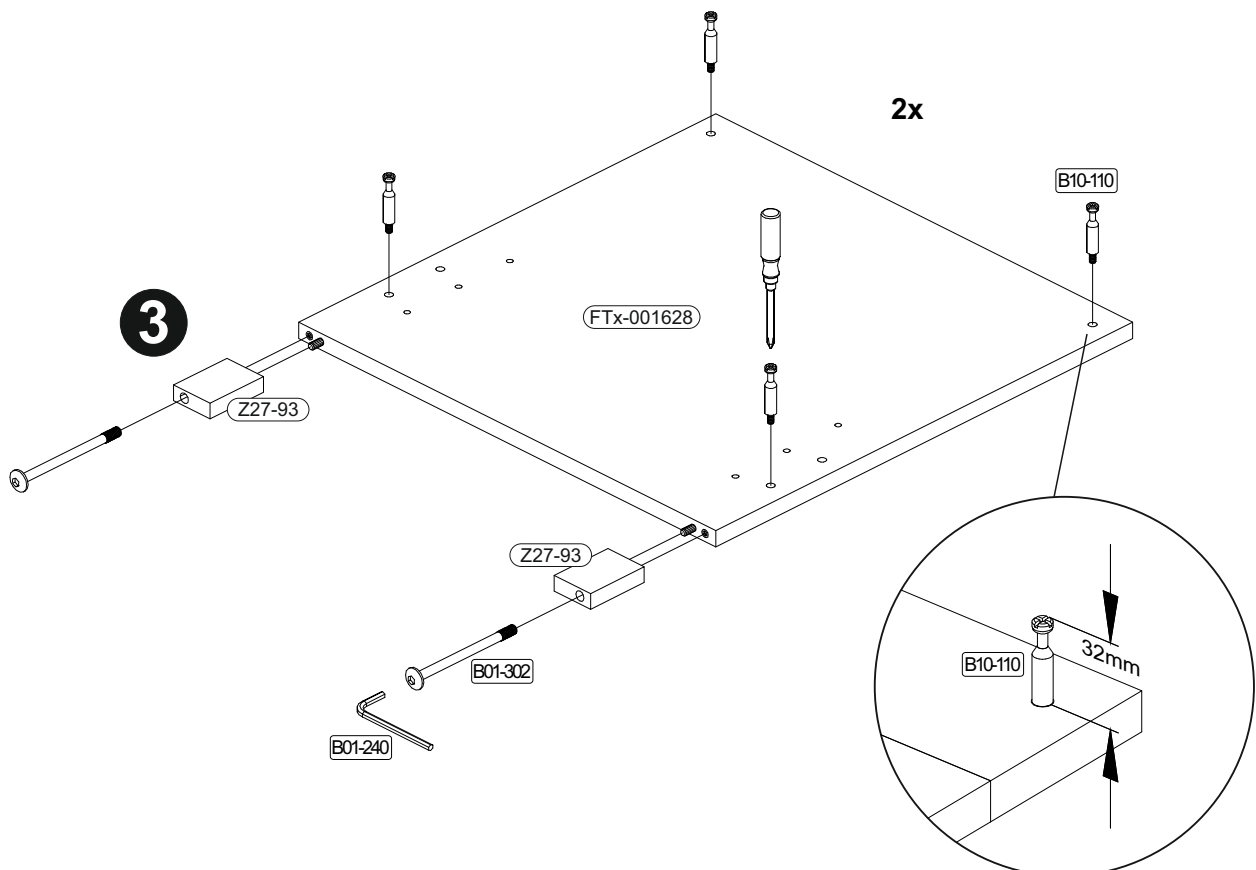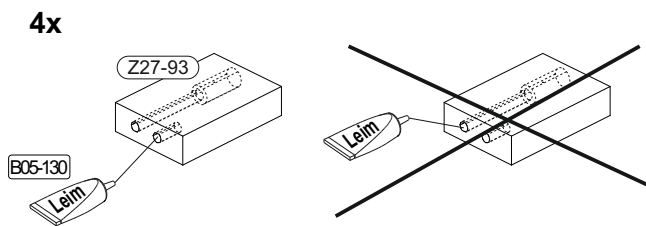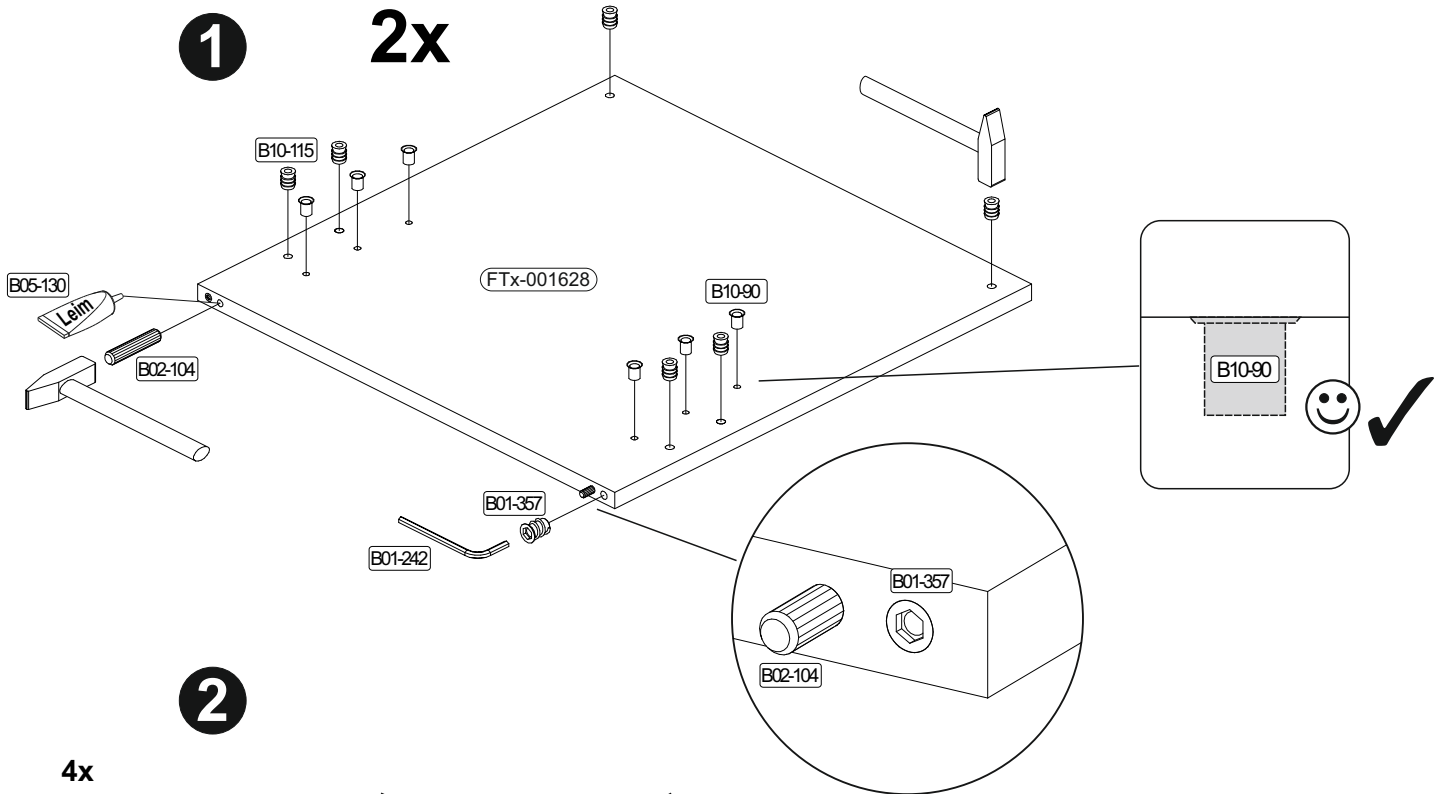




2

						
	B10-95	B10-105	B10-80	B10-85		
	4x	8x	2x	2x		
	6,3x19					

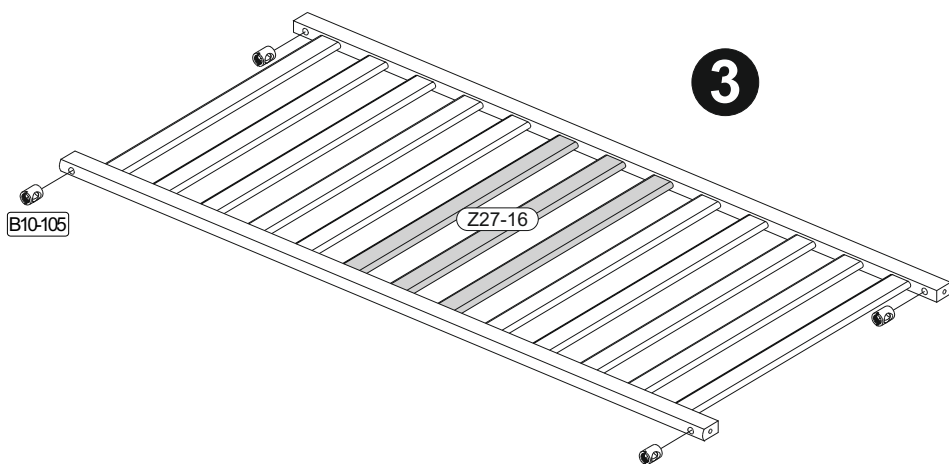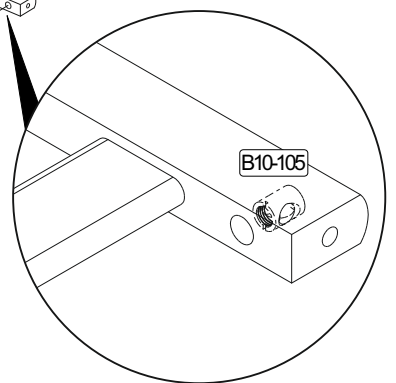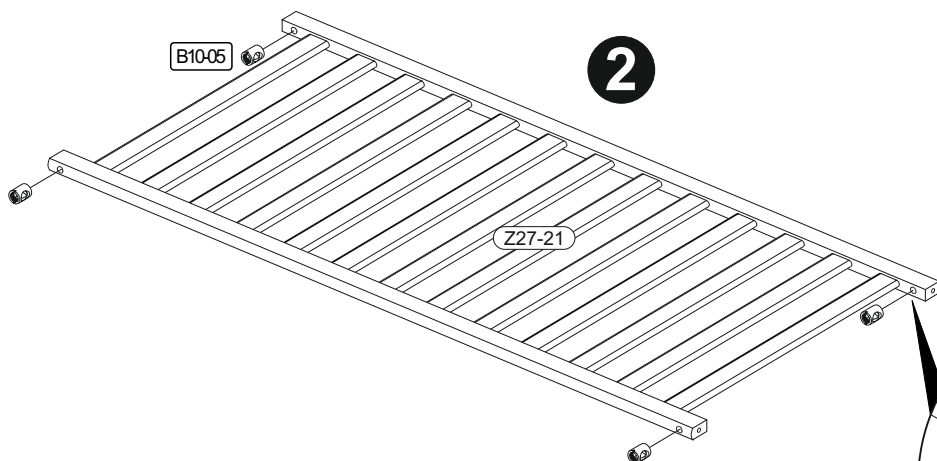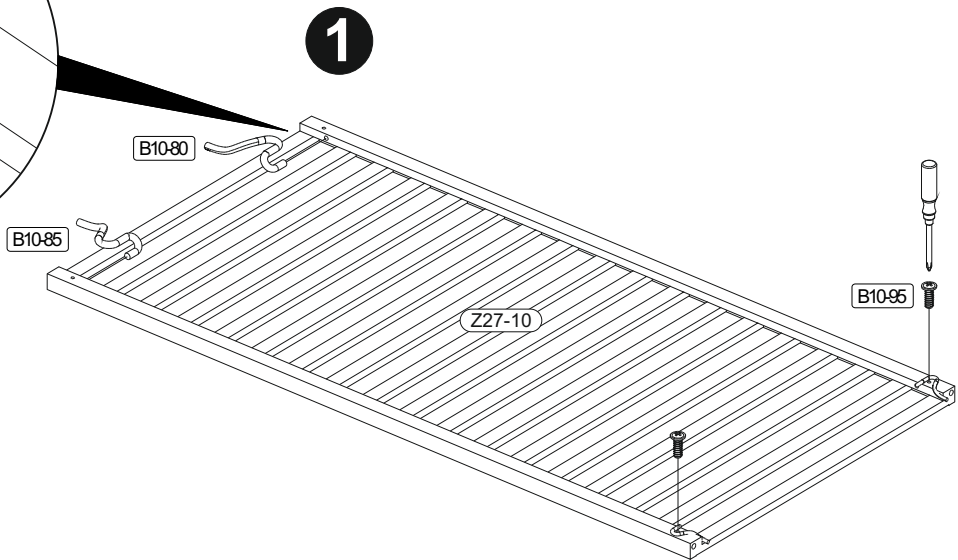
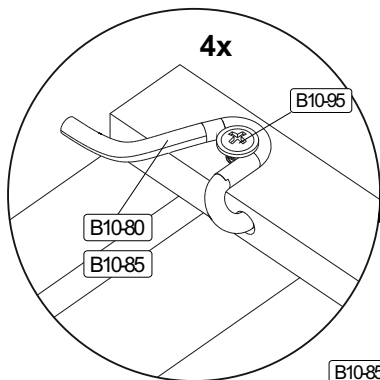


3



B10-101		B01-239	
8x	M6x6 SW3	1x	SW 3

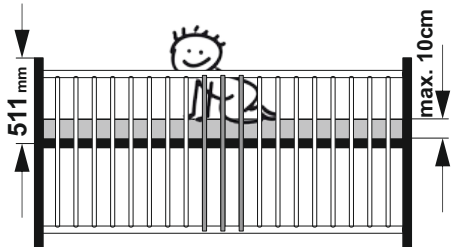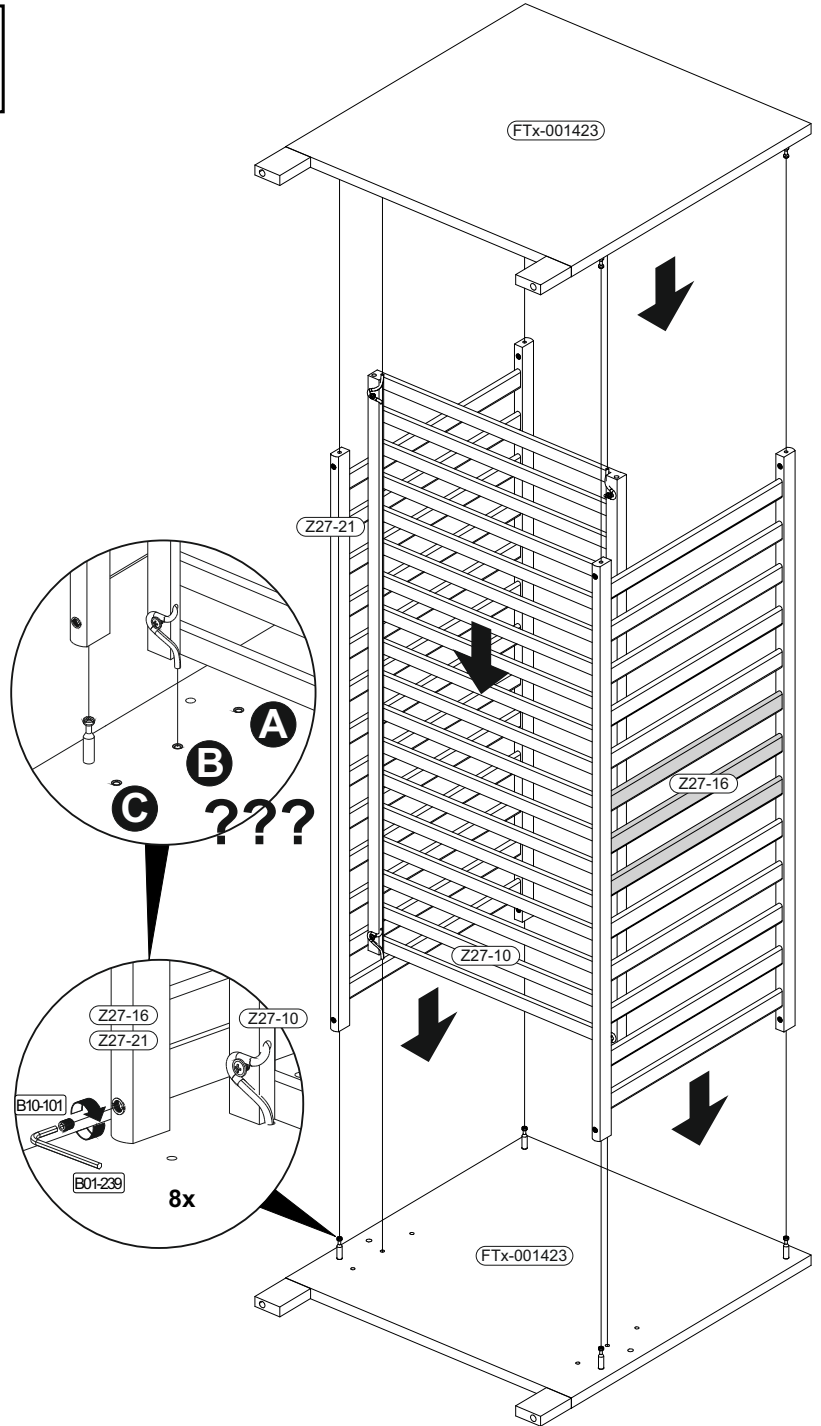

A

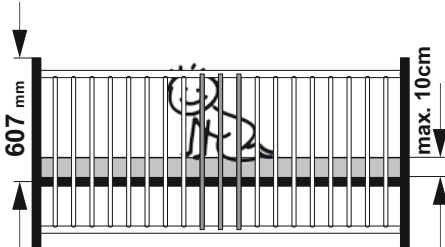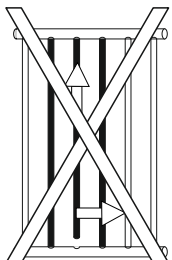

B

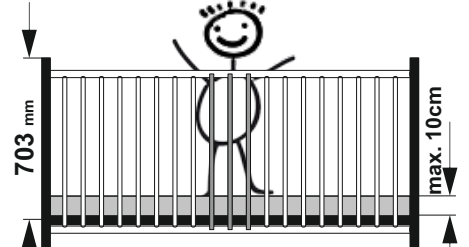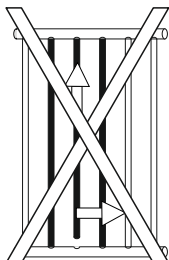

C

